

**HIGH-RESOLUTION SWIR
CAMERA**

Xenics
EXOSENS GROUP

Wildcat+ 640 Series



HIGH-RESOLUTION SWIR CAMERA

KEY FEATURES



HIGH-RESOLUTION SWIR IMAGING



INDUSTRY PROVEN CAMERA DESIGN




**FLEXIBLE OPTICAL MOUNT &
LENS OPTIONS**

The Wildcat+640 series is based upon a state-of-the-art InGaAs detector with 640x512 pixels and 20 μm pixel pitch. The camera offers superior, high-resolution SWIR imaging capabilities, comes in a versatile and industry-proven Wildcat camera package (GenICam compliant) and offers advanced on-board image processing.

The Wildcat+640 camera outputs full frame images up to 300 Hz via either a CameraLink or USB3 Vision interface.



Wildcat+ 640 Series

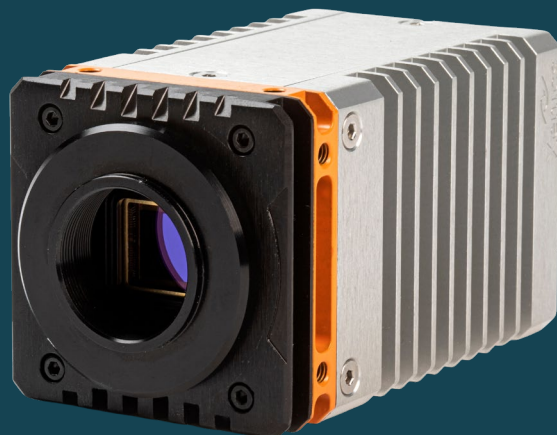

KEY PERFORMANCES

Image format / Pixel pitch	640 x 512 pixels / 20 μ m
Detector type	InGaAs photodiode array with CTIA ROIC
Integration type	Snapshot - global shutter
Spectral range	900 - 1700 nm
Max frame rate (full frame)	300 Hz
Power consumption	<7 W
Power supply voltage	DC 12 V

FUNCTIONS & INTERFACES

Command and control	CameraLink Base or USB3 Vision
Connector trigger	Lemo 1B.308 (unified connector)
Camera dimensions (width x height x length)	55 mm x 55 mm x 72 mm (CL); 55 mm x 55 mm x 91.5 mm (U3V)
Optical interface	C-mount or M42
Camera weight	316 gr (CL); 358 gr (U3V)

PRODUCT SELECTOR GUIDE

XEN-000874 (Wildcat+ 640 CL 300)	XEN-000873 (Wildcat+ 640 U3V 300)
----------------------------------	-----------------------------------

advancedimaging@exosens.com



exosens.com

EXOSENS
REVEAL THE INVISIBLE

© Xenics. The information furnished is believed to be accurate and reliable, but is not guaranteed and is subject to change without notice. No liability is assumed by Xenics nor by any Exosens Group companies. Performance data represents typical characteristics as individual product performance may vary. Customers should verify that they have the most current Xenics product information before placing orders. Texts and pictures may not be considered as contractually binding. This document may not be reproduced, in whole or in part, without the prior written consent of Xenics.